




# DIRECTIVE SYSTEMS


177 DIXON RD.  
LEBANON, ME. 04027  
TEL: 207-658-7758 FAX: 207-658-4337  
www.directivesystems.com

## 958 MHz Loop Yagi, Model 3318LYDRM (REAR MOUNT)

### SPECIFICATIONS

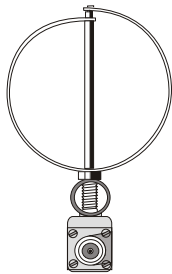

HORIZONTAL  
POLARIZATION

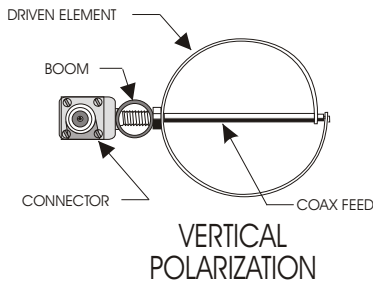

VERTICAL  
POLARIZATION

Frequency Range:	930-990 MHz
Number of elements:	18
Boom Length:	72 inches
Boom diameter:	1 inch
Mast diameter:	2 inch max.
Weight:	4 pounds (assembled)
Connector:	Type N female
Gain:	16.5 dBd
3 dB Beamwidth (E Plane) :	=28°
F/B ratio:	>20 dB
Maximum Power:	550 W. average
Stacking distance:	21 1/2 inches vertical 24 inches horizontal

### ASSEMBLY INSTRUCTIONS

- 1) Unpack antenna and locate the hardware package. Boom is broken between directors 8 & 9. Remove D8 and slide boom pieces together to alignment marks. Replace D8.
- 2) Insert the U-bolt in the Rear-Mount Bracket. The Bracket can be oriented for horizontal or vertical polarization. (See above figures.)
- 3) Attach the feed line. The connector should be sealed with electronic grade RTV or equivalent. Don't forget to seal the area where the .141" semi rigid coaxial cable extends into the rear of the antenna connector.
- 4) Straighten any mis aligned elements and tighten hardware if necessary.
- 5) The antenna SWR has been adjusted at the factory for less than 1.3:1. Additional tweaking can be accomplished by adjusting the distance between the driven element and R1 and D1, or by adjusting the shape of the driven element.
- 6) If antennas are to be stacked, see "Instructions For Stacking Loop Yagis"
- 7) Enjoy your new antenna.